

Demo Board Instructions

There are two buttons labeled “S” for Select, and “E” for Execute. Pushing the “S” button moves you through the menu. Pushing “E” goes to the selected menu item.

Pushing the “S” button any time gets you back to the menu.

When power is turned on, the display will be in the mode it was left in at power up.

To reset the Tennis score, cycle the power.

